



ORYX RISK MANAGEMENT (PTY) LTD
COMPLETE FIRE PROTECTION

ORYX RISK MANAGEMENT (PTY) LTD
Unit 6, Elect Park, Tee Jay Street
Brackenfell
CAPE TOWN, 7560
SOUTH AFRICA
PO Box 1022, Gape Gate
Brackenfell, 7562
Cape Town
South Africa
Tel: (+27) 21 982 2025
Fax: (+27) 86 555 2768
Email: admin@oryxrisk.co.za
Website: www.oryxrisk.co.za
Co. Reg. No. 2010/015240/07
VAT: 4420256911
Director: A Smit

SERVICE PROCEDURE: ABOVE GROUND HYDRANT

- Clean any debris out of the hydrant valve and its surroundings.
- Remove the lip washer, inspect for any cracks or damage.
- Inspect lip washer (lubricate lightly).
- Insert test mechanism with gauge.
- Open valve in slow intervals until the hydrant is fully opened.
- Check the static pressure reading on the gauge.
- Close the hydrant valve.
- Release water pressure out of the testing apparatus.
- Static pressure should be recorded.
- If low or no water is found it is essential that this be noted, and that the customer should be notified in writing via the report of the findings.

Water pressure: 300kPa minimum and 1000kPa maximum.